 




INSTRUCTION MANUAL

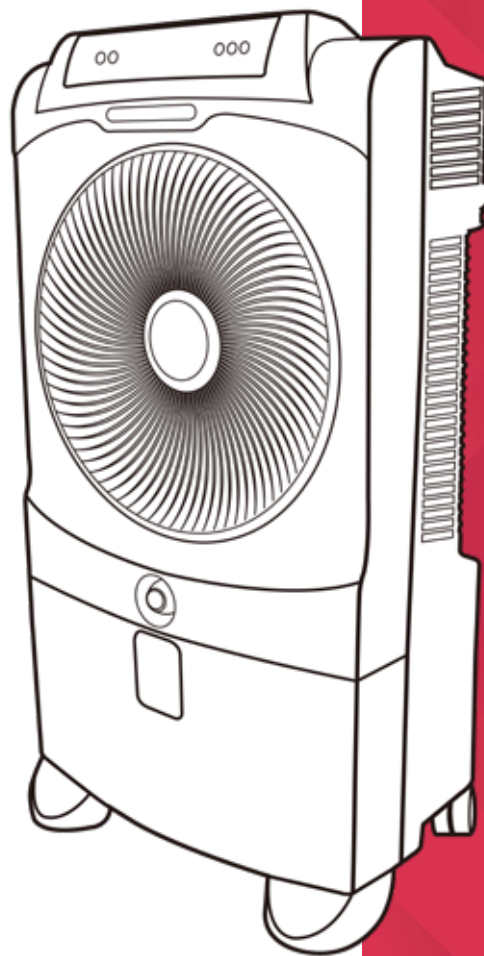

30cm Misting Fan

Model: DCMIST30

For domestic household use only.



IMPORTANT

THESE INSTRUCTIONS SHOULD BE READ CAREFULLY AND RETAINED FOR FUTURE REFERENCE. **Note also the information presented on the appliance**

CAUTION: FAILURE TO FOLLOW THESE INSTRUCTIONS MAY CAUSE INJURY AND/OR DAMAGE AND MAY INVALIDATE YOUR WARRANTY

Please read the operating instructions carefully before using your evaporative cooler for the first time and keep them in a safe place.

WARNING - This appliance must not be used in a bathroom.

WARNING - Do not use this appliance in the immediate surroundings of a bath, a shower or a swimming pool.

- Never immerse the appliance in water or other liquids.
- Operate this unit only on a firm, flat surface to avoid the risk of water leakage. Ensure that the unit is kept upright at all times.
- Do not place on soft, unstable or non-horizontal/angled surfaces.
- Never operate the appliance if a cable or connector has been damaged, after appliance malfunction or if the appliance was dropped or is otherwise damaged.
- If the mains lead is damaged it must only be replaced by the manufacturers service agent or a similarly qualified person in order to avoid a hazard.
- Please ask a professional service agent to repair the product. Improper repair may cause danger to users.
- Disconnect the appliance from mains power whenever it is not in use, before relocating it, and before cleaning.
- Operate the appliance only at the voltage specified on the rating label.
- Only connect the unit to a properly installed and easily accessible socket so that you can quickly disconnect the plug if necessary.
- Do not connect this product to the mains using an extension lead.
- This evaporative cooler is only intended for **INDOOR RESIDENTIAL** applications. This evaporative cooler should not be used for commercial or industrial or leisure applications or in small enclosed spaces.
- Never use the mains lead as a carrying strap or pulling lead.
- To avoid a fire or electrocution hazard, **NEVER** put the cord near heat registers, radiator, stoves or heaters.
- **DO NOT** cover cord with carpeting, throw rugs, runners, or similar coverings.
- **DO NOT** route cord under furniture or appliances. Take care to position the cord away from traffic areas and where it will not be a tripping hazard.
- **DO NOT** use the unit near windows or where water collects. Rain and water collection may lead to a risk of fire or electric shock.
- Only operate this appliance with a minimum of 50cm clearance all around i.e. away from walls, furniture and overhanging objects such as curtains or a shelf.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- To prevent spillage, empty the water tank before lifting or relocating the appliance.
- **WARNING:** To avoid danger of suffocation please remove all packaging materials particularly plastic and EPS and keep these away from vulnerable people, children and babies.
- **NEVER** drop or insert any object or fingers into any openings.
- Do not use the appliance in locations where paint, petrol or other flammable liquids are used or stored.
- Do not use bug sprays or other flammable cleansers/vapour sprays on or around the unit.
- Always switch off the unit and take the plug out of the socket:
 - If you are not using the unit
 - Before you clean or carry out maintenance on the unit
 - If a fault occurs
 - In the event of an electrical storm.
- Avoid electromagnetic interference. Keep the unit at least 1 metre away from electrical appliances such as televisions & radios.

WARNING - KEEP BATTERIES OUT OF REACH OF CHILDREN

- Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the oesophagus.
- If you suspect your child has swallowed or inserted a button battery immediately call the 24-hour Poisons Information Centre on 13 11 26 (in Australia) or 0800 764 766 (in New Zealand) for fast, expert advice.
- Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened. Do not use if the compartment is not secure.
- Dispose of used button batteries immediately and safely. Flat batteries can still be dangerous.





Exposed to the weather outdoors



 
Near water



If the power cable wires are frayed or cut



Where small children may be left unattended

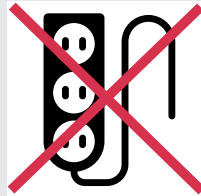

If an extension lead may become overloaded



Where the power cable may be damaged



On a slope or uneven surface



Where there is risk of fire or close to a naked flame



Where it may be damaged by chemicals



Where there is a risk of interference by foreign objects



This product is not made for DIY repair





If there is a risk of water falling on the unit

Specification


| Model no. | DCMIST30 |
|------------------------|-------------------------|
| Colour | White/Black |
| Power supply | 220-240V~, 50Hz |
| Rated power | 100W |
| Speed settings | 3 |
| Modes | Misting function |
| Mist output | 0.27L/h (MAX) |
| Water tank capacity | 5.5L |
| Remote control | Y |
| Timer | 0-10 hours |
| Swing function | Y |
| Controls | Button with LED display |
| Max. room size | 30m ² |
| Water consumption | 1.2L/h (high speed) |
| Weight (net) | 7.1kg |
| Dimensions (w x d x h) | 445 x 315 x 840mm |

- For greater precision, please always refer to the rating label placed on the product.

  
Parts

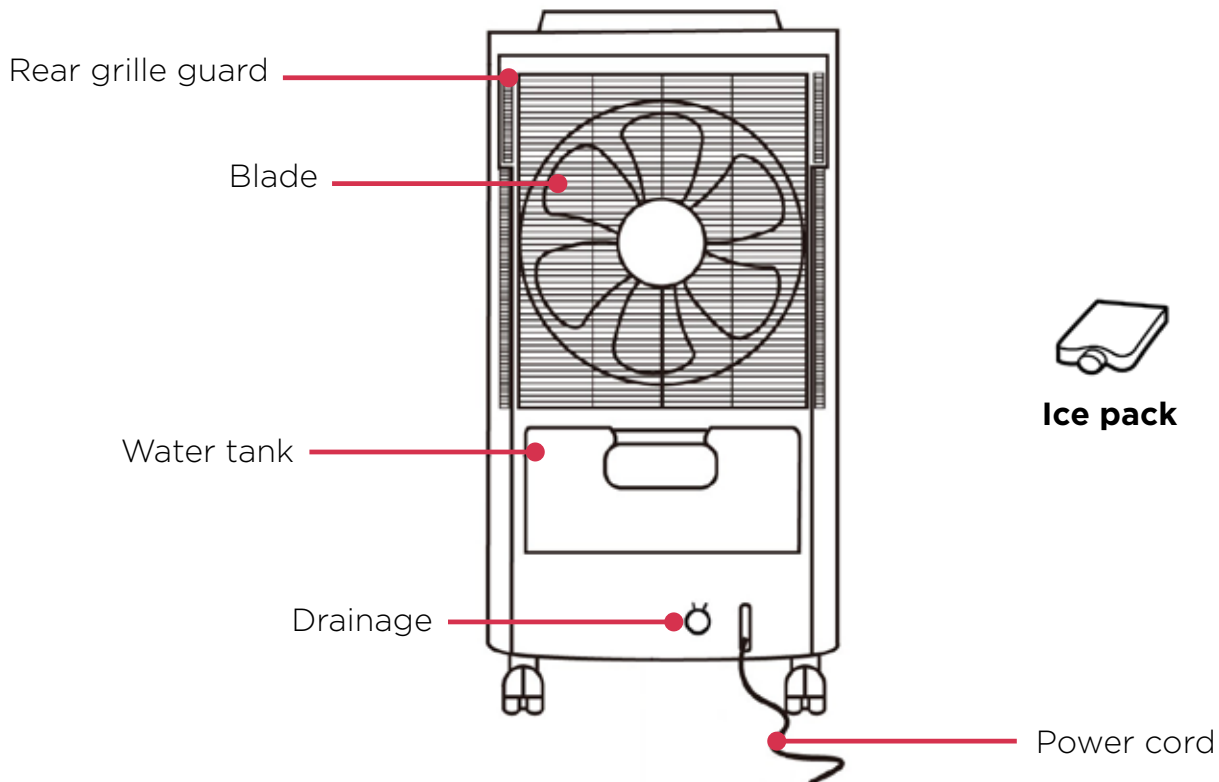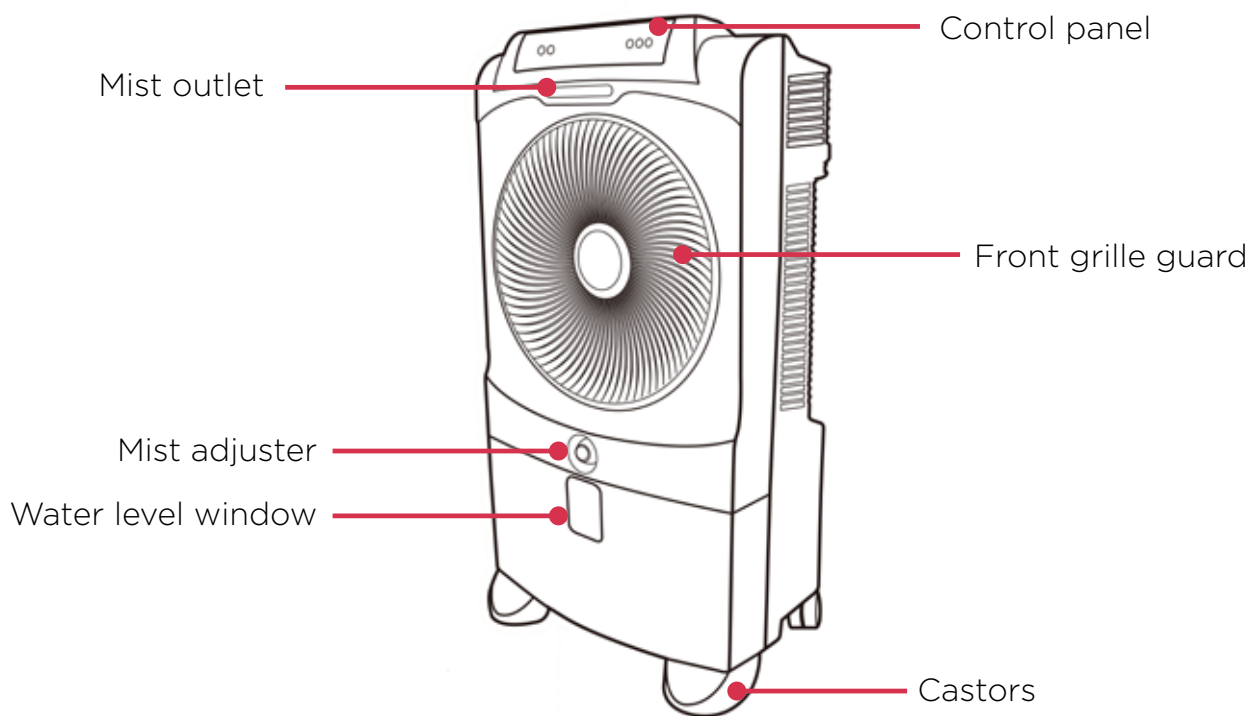

Display & Control Panel

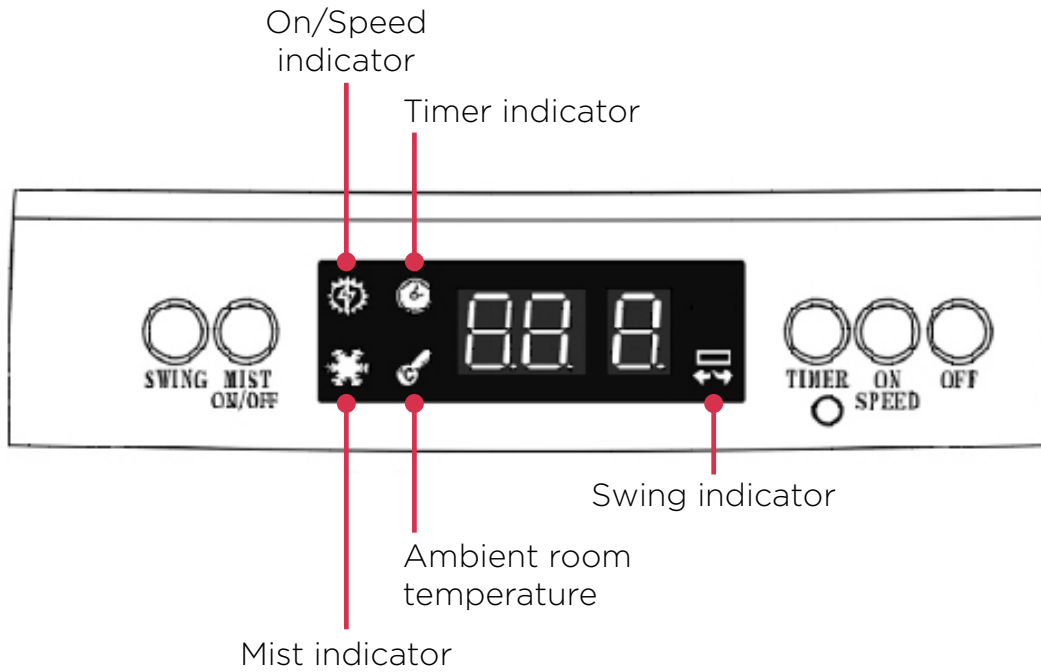 

Remote Control

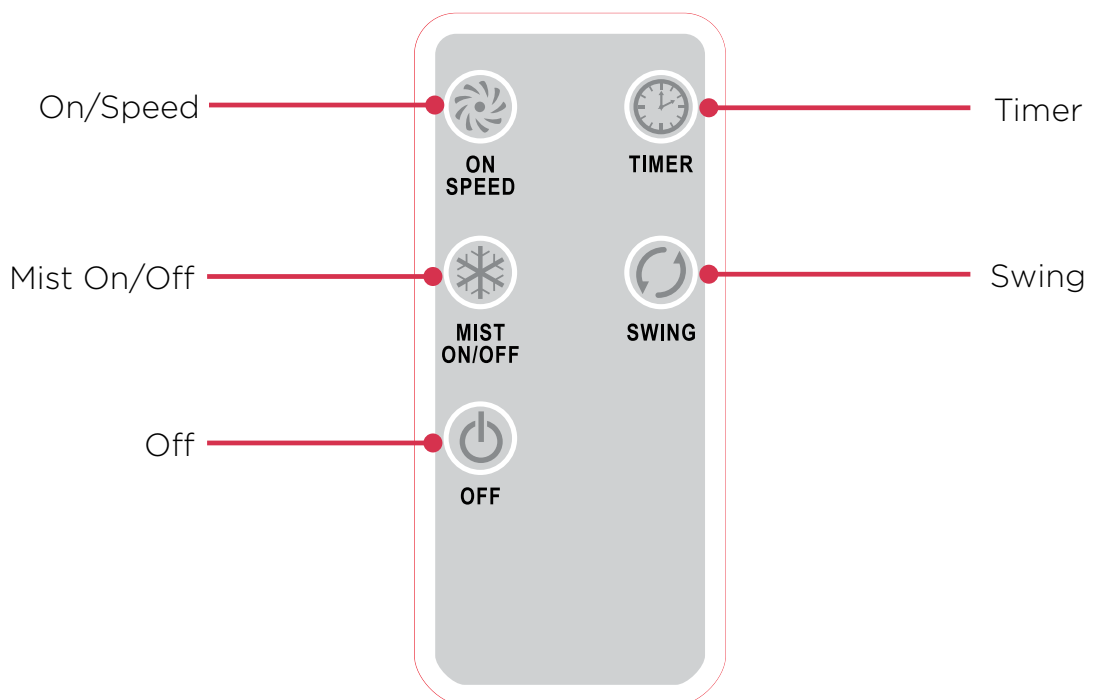 

ON/SPEED

To turn the unit "on", press the **ON/SPEED** button. The unit will automatically start in medium speed. Each time the button is pressed, the speed increases from low to medium, and then to high.

The power indicator light on the control panel illuminates as speed increases.

The **ON/SPEED** button only switches "on" the fan function, not the **MIST** function.

OFF

Press the **OFF** button at anytime to switch "off" the unit.

AMBIENT TEMPERATURE

The unit will display the room temperature when the unit is switched "on".

TIMER

Each time the **TIMER** button is pressed, the time increases in 0.5hr increments to a MAX of 10 hours. To cancel the **TIMER** function, keep pressing the button until the time is cancelled and the ambient room temperature is displayed.

MIST FUNCTION

To start the **MIST** function, press the **MIST** button and the snowflake icon will illuminate. Adjust the mist output by the mist adjuster dial. The **MIST** function operates independently, so the **MIST** function must be cancelled/turned off, prior to turning the entire unit **OFF**.

SWING

Press this button to choose between either a fixed or swinging airflow. Press the **SWING** button to activate this function, press it again to turn off the **SWING**.

REMOTE CONTROL

This unit comes with a full functioning remote control. The remote requires batteries. The effective range is approximately 6m.

ICE PACK

An **ICE PACK** is included underneath the water tank. Remove it and fill it 90% full of water and shake so the gel and water combines. Place the **ICE PACK** in the freezer overnight. Once frozen put the **ICE PACK** back into position under the water tank and press the **MIST** button to enhance the cooling effect.

NOTE: The **ICE PACK** is reusable. **DO NOT** empty the contents after the initial fill. Do not consume the contents of the **ICE PACK**. Children should be supervised so they do not play with the **ICE PACK**.

Operation & Set Up

1. Remove the unit from its packaging.
2. Remove the water tank and turn upside down and remove the lid. Fill the water tank with cool, filtered water. Do not over fill.
3. Replace the water tank into the unit, and plug the cord into a power outlet. .
4. Press the **ON/SPEED** button to turn the unit ON. The unit will start in medium speed then to low speed. Cycle through the speeds as required.
5. Press the **MIST** button to start the misting function.
6. Use the **ICE PACK** as described on the previous page.
7. The unit will operate initially on a continual basis. If a set period of operation is required, please follow the **TIMER** instructions on the previous page.
8. Press the **SWING** button as required.
9. To switch the unit off at any time, press the **OFF** button.

Precautions

- Do not overfill the water tank (check the MAX fill line).
- Always check the water level prior to using the mist function.
- Use only cold, clean filtered water.
- For safety reasons the unit will turn OFF when the water tank is removed.
- Do not allow the same water to sit in the machine for a prolonged period.
- It is recommended that any water left in the machine for 3 days or more be removed and replaced with clean water.
- The control panel must not come in contact with water or any other liquids.
- Make sure the tank lid is secure and tight before placing back into the unit.

Using the Remote Control

1. Open the battery cover of the remote control, and insert a 3V CR2032 battery.
2. Please point to the receiver when using the remote control.
3. If the battery voltage is low, please open the battery cover as per the diagram and replace with a new battery (CR2032). Then replace the battery cover.

Disconnect the unit from the power supply and remove the rear screen by loosening the screw. Use a vacuum cleaner or soft cloth to remove loose dust and dirt, and then replace the rear screen.

Decalcifying the water tank

In areas with hard water, deposits will build up, so it is recommended to decalcify the unit every six months. The cartridge retains calcium and mineral particles, thus preventing such substances from being emitted with the vapor and causing white deposits on furniture etc.

Caution: When cleaning the appliance, never use window cleaner, furniture polish, thinner, hot water over 50 degrees celcius.

Water Tank

The water tank should be cleaned regularly. If not cleaned, deposits may build up affecting the efficiency of the unit. Cleaning the tank with mild soapy water once every month is recommended. To do this, following the steps below:

1. Disconnect the appliance from the main supply.
2. Completely remove the water tank from the unit.
3. Remove the lid and any deposits or dirt from the tank with a mild, soapy detergent and cloth.
4. Flush the tank with clean water.
5. Reverse the procedure and make sure the tank is in place.

Outside Cabinet

1. Turn the unit OFF and disconnect the appliance from the power supply.
2. Remove any dust build up with a soft brush.
3. Wipe the surface of the unit with a soft damp cloth. Mild detergent can be used for any stubborn marks.

Do not use abrasive sponges, scouring pads, or a stiff brush to clean the

IMPORTANT

The control panel and other parts must not come into contact with water or any other liquids.

Storage

If not using the unit for an extended period of time. After cleaning please:

- Turn the unit off, unplug and take care of the mains lead & plug.
- Cover the unit and store it upright in a location where it will not receive direct sunlight. NB- Prolonged exposure to direct sunlight will discolour the enclosure.

Maintenance

If the unit fails to operate efficiently, is broken or other problems arise, unplug and do not operate. Ask for advice by calling your local after sales service agent or the Customer Care Centre on 1300 556 816 (AU) / 0800 666 2824 (NZ).

Warranty


Please refer to the warranty card in the box for warranty information. For any troubleshooting advice, please contact the relative Customer Care Centre below.

Glen Dimplex Australia Pty Ltd

1340 Ferntree Gully Road,
Scoresby 3179, Victoria
Australia
Ph: 1300 556 816

Glen Dimplex New Zealand Ltd

38 Harris Road, East Tamaki,
Auckland 2013
New Zealand
Ph: 0800 666 2824

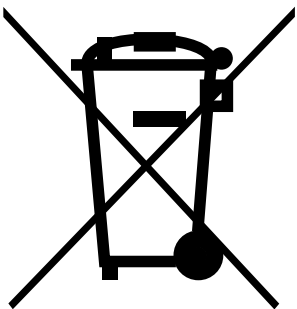

Recycling: Do not dispose of electrical appliances as unsorted municipal waste. Use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the ground water, polluting the food chain and damaging health and well-being.



Customer Care: 1300 556 816
customer.care@glendimplex.com.au
www.dimplex.com.au

Supplied by Glen Dimplex Australia
1340 Ferntree Gully Road, Scoresby, Victoria, 3179

© Glen Dimplex Australia. All rights reserved. Material contained in this publication may not be reproduced in whole or in part, without prior permission in writing of Glen Dimplex Australia.