


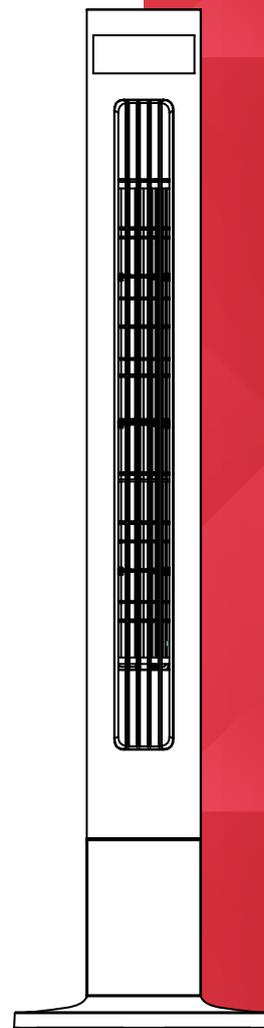

INSTRUCTION MANUAL



Ultra-Slim Tower Fan DC

Model: DCTFDC97

For domestic household use only.



IMPORTANT

THESE INSTRUCTIONS SHOULD BE READ CAREFULLY AND RETAINED FOR FUTURE REFERENCE.

Note also the information presented on the appliance

CAUTION: FAILURE TO FOLLOW THESE INSTRUCTIONS MAY CAUSE INJURY AND/OR DAMAGE AND MAY INVALIDATE YOUR WARRANTY

Please read the operating instructions carefully before using your fan for the first time and keep them in a safe place.

WARNING - This appliance must not be used in a bathroom.

WARNING - Do not use this appliance in the immediate surroundings of a bath, a shower or a swimming pool.

- If the mains lead is damaged it must only be replaced by the manufacturers service agent or a similarly qualified person in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Prior to cleaning or other maintenance, the appliance must be disconnected from the supply mains.
- Never immerse the appliance in water or other liquids.
- Do not place on soft, unstable or non-horizontal/angled surfaces.
- Never operate the appliance if a cable or connector has been damaged, after appliance malfunction or if the appliance was dropped or is otherwise damaged.
- Please ask a professional service agent to repair the product. Improper repair may cause danger to users.
- Disconnect the appliance from mains power whenever it is not in use, before relocating it, and before cleaning.
- Operate the appliance only at the voltage specified on the rating label.
- Only connect the unit to a properly installed and easily accessible socket so that you can quickly disconnect the plug if necessary.
- Do not connect this product to the mains using an extension lead.
- This fan is only intended for **INDOOR RESIDENTIAL** applications. This fan should not be used for commercial or industrial or leisure applications or in small enclosed spaces.
- Never use the mains lead as a carrying strap or pulling lead.
- To avoid a fire or electrocution hazard, **NEVER** put the cord near heat registers, radiator, stoves or heaters.

- **DO NOT** cover cord with carpeting, throw rugs, runners, or similar coverings.
- **DO NOT** route cord under furniture or appliances. Take care to position the cord away from traffic areas and where it will not be a tripping hazard.
- **DO NOT** use the unit near windows or where water collects. Rain and water collection may lead to a risk of fire or electric shock.
- **DO NOT COVER.**
- Only operate this appliance with a minimum of 50cm clearance all around i.e. away from walls, furniture and overhanging objects such as curtains or a shelf.
- **WARNING:** To avoid danger of suffocation please remove all packaging materials particularly plastic and EPS and keep these away from vulnerable people, children and babies.
- **NEVER** drop or insert any object or fingers into any openings.
- Do not use the appliance in locations where paint, petrol or other flammable liquids are used or stored.
- Do not use bug sprays or other flammable cleansers/vapour sprays on or around the unit.
- Always switch off the unit and take the plug out of the socket
 - If you are not using the unit
 - Before you clean or carry out maintenance on the unit
 - If a fault occurs
 - In the event of an electrical storm.
- Avoid electromagnetic interference. Keep the unit at least 1 metre away from

WARNING - KEEP BATTERIES OUT OF REACH OF CHILDREN

- Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the oesophagus.
- If you suspect your child has swallowed or inserted a button battery immediately call the 24-hour Poisons Information Centre on 13 11 26 (in Australia) or 0800 764 766 (in New Zealand) for fast, expert advice.
- Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened. Do not use if the compartment is not secure.
- Dispose of used button batteries immediately and safely. Flat batteries can still be dangerous.





Exposed to the weather outdoors



Near water



If the power cable wires are frayed or cut



Where small children may be left unattended



If an extension lead may become overloaded



Where the power cable may be damaged



On a slope or uneven surface



Where there is risk of fire or close to a naked flame



Where it may be damaged by chemicals



Where there is a risk of interference by foreign objects



This product is not made for DIY repair




If there is a risk of water falling on the unit

Specification

Model no.	DCTFDC97
Rated voltage	220-240V
Rated frequency	50Hz
Rated power	15W
Weight (gross)	3kg
Motor type	DC
Noise level	≤50dB
Product size (w x d x h)	246 × 246 × 973.4mm

- For greater precision, please always refer to the rating label placed on the product.

Parts

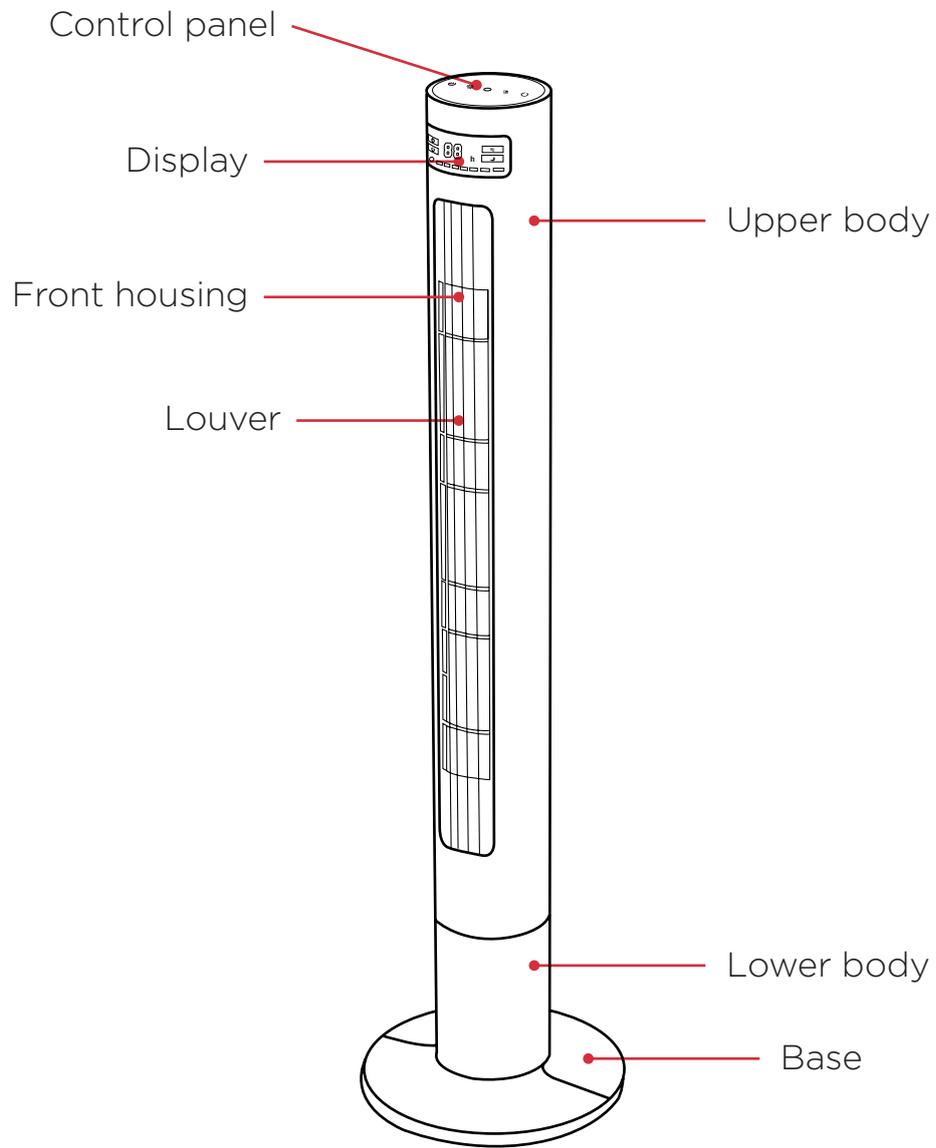


Fan Operation


A. Battery Installation

One button CR2032 3V battery has been included. Please insert the battery into the remote control, aligned to the direction of the polarity.


B. Remote control panel

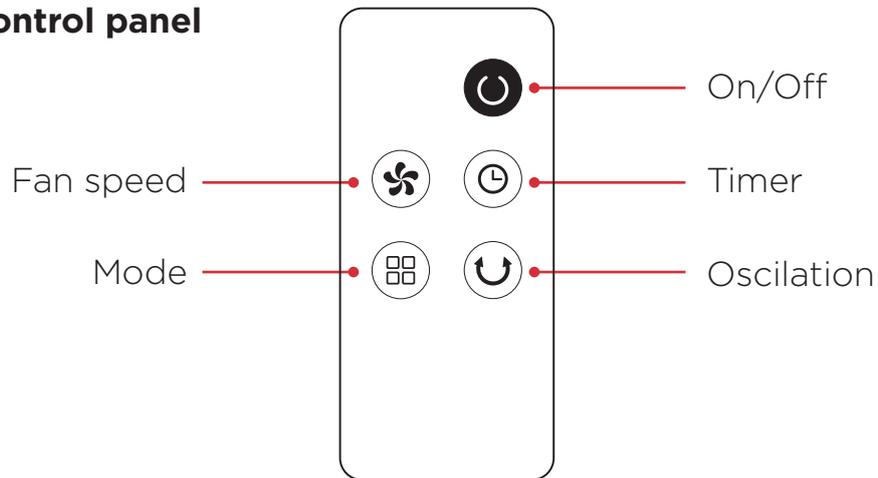

C. Control display panel

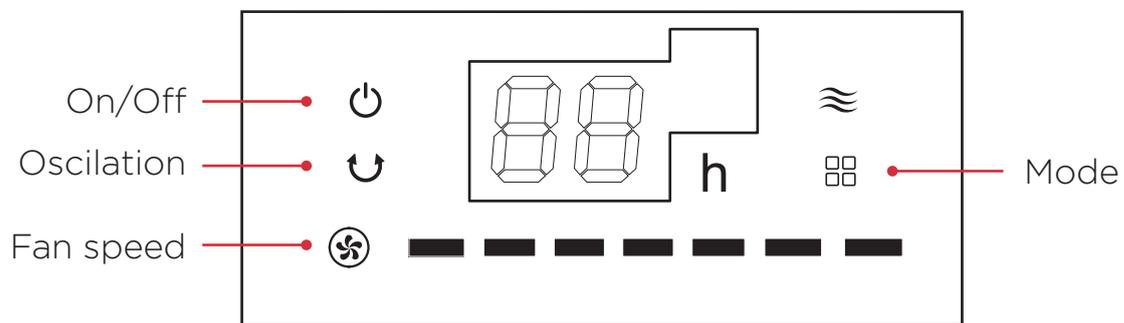

D. Button control panel

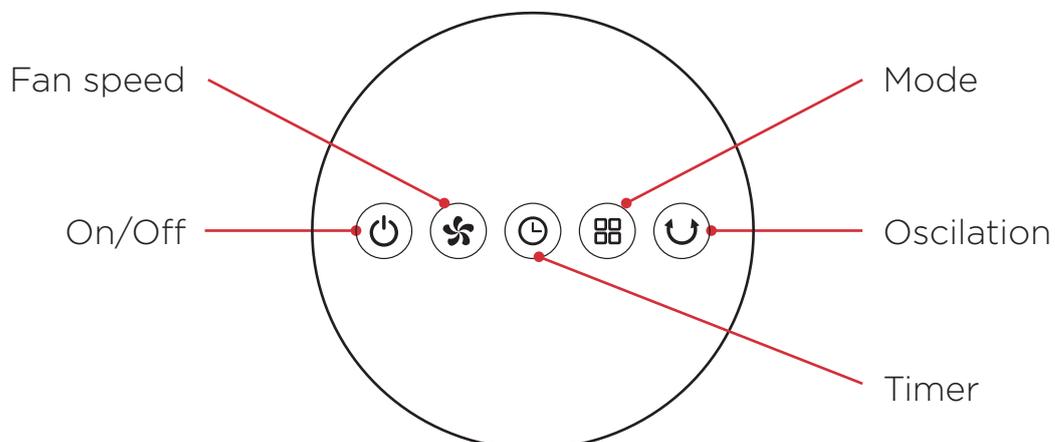

Operation

ATTENTION:

PLEASE READ THIS MANUAL CAREFULLY BEFORE CONNECTING DEVICE TO THE POWER SUPPLY. CHECK THE VOLTAGE MATCHES THE UNIT RATING BEFORE OPERATING.

(RATED ELECTRIC POWER: 220~240V; 50 Hz).

STANDBY MODE

Once plugged in, the device will beep once indicating standby mode.

POWER ON/OFF

Once in standby, press the **ON/OFF** button to turn on. The fan will default to the lowest speed (1/7), with no timer or oscillation. To switch off, press the **ON/OFF** again.

CHANGE FAN SPEED

To change the speed, press the **FAN SPEED** button until desired fan speed is selected. There are seven (7) speeds in total, with seven being the highest. The LED screen will indicate the current speed level.

SET THE TIMER

Press the **TIMER** button to select your desired length of operation. Press once to select 1hr, and twice to select 2hrs and so on. You may select up to 12 hours. The selected time will show on the LED display panel. The device will automatically power off after the duration is met.

CHANGE MODE

Press the **MODE** button to change from Normal > Natural > Sleep

NORMAL MODE: Fan speed will run as per the user's setting, at the manually selected fan speed.

NATURAL MODE: Fan speed will change automatically in a set time interval to mimic a natural breeze effect.

SLEEP MODE: Fan speed will fluctuate automatically in a set time interval to provide a comfortable sleeping environment. Under sleep mode operation, three fan speeds are available dependent on the original fan speed selected:

- A. High speed: Fan will operate on high level natural wind for 30mins and then reduce speed to medium for a further 30mins. The fan will then operate at the lowest fan speed for the duration of operation.
- B. Medium speed: Fan will operate on a medium level natural wind for 30mins and then switch to low speed.
- C. Low: Fan will operate with low level natural wind until it is switched off.

Operation

OSCILLATION

Press the **OSCILLATION** button once to turn off, press again to stop the swing function.

Cleaning

Over time, dust can accumulate on the rear net which can affect the fan's performance. It is recommended to clean the fan at least once a month.

- 1 Turn the unit off and disconnect the appliance from the power supply.
- 2 Remove any dust build up with a soft brush, and gently clean the rear net with a vacuum cleaner.
- 3 Wipe the surface of the unit with a soft damp cloth. You may use a mild detergent for any stubborn marks.

IMPORTANT

The control panel and other parts must not come into contact with water or any other liquids.

Maintenance

If the unit fails to operate efficiently, is broken or other problems arise, unplug and do not operate. Ask for advice by calling your local after sales service agent or the Customer Care Centre on 1300 556 816 (AU)/ 0800 666 2824 (NZ).

Warranty


Please refer to the warranty card in the box for warranty information. For any troubleshooting advice, please contact the relative Customer Care Centre below.

Glen Dimplex Australia Pty Ltd

1340 Ferntree Gully Road,
Scoresby 3179, Victoria
Australia
Ph: 1300 556 816

Glen Dimplex New Zealand Ltd

38 Harris Road, East Tamaki,
Auckland 2013
New Zealand
Ph: 0800 666 2824

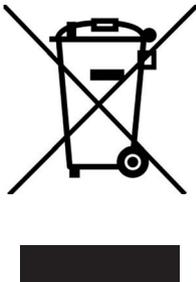

Recycling: Do not dispose of electrical appliances as unsorted municipal waste. Use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the ground water, polluting the food chain and damaging health and well-being.



Customer Care: 0800 666 2824
customer.care@glendimplex.co.nz
www.dimplex.co.nz

Supplied by Glen Dimplex New Zealand Ltd
38 Harris Road, East Tamaki, Auckland 2013

© Glen Dimplex New Zealand Ltd. All rights reserved. Material contained in this publication may not be reproduced in whole or in part, without prior permission in writing of Glen Dimplex New Zealand Ltd.