



INSTRUCTION MANUAL



DC Rechargeable Air Circulator

Model: DCAC25DC

For domestic household use only.



IMPORTANT

THESE INSTRUCTIONS SHOULD BE READ CAREFULLY AND RETAINED FOR FUTURE REFERENCE.

Note also the information presented on the appliance

CAUTION: FAILURE TO FOLLOW THESE INSTRUCTIONS MAY CAUSE INJURY AND/OR DAMAGE AND MAY INVALIDATE YOUR WARRANTY

Please read the operating instructions carefully before using your air circulator for the first time and keep them in a safe place.

WARNING - This appliance must not be used in a bathroom.

WARNING - Do not use this appliance in the immediate surroundings of a bath, a shower or a swimming pool.

- If the charger or supply cord is damaged it must only be replaced by the manufacturers service agent or a similarly qualified person in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Prior to cleaning or other maintenance, the appliance must be disconnected from the supply mains.
- Never immerse the appliance in water or other liquids.
- Do not place on soft, unstable or non-horizontal/angled surfaces.
- Never operate the appliance if a cable or connector has been damaged, after appliance malfunction or if the appliance was dropped or is otherwise damaged.
- If the mains lead is damaged it must only be replaced by the manufacturers service agent or a similarly qualified person in order to avoid a hazard.
- Please ask a professional service agent to repair the product. Improper repair may cause danger to users.
- Disconnect the appliance from mains power whenever it is not in use, before relocating it, and before cleaning.
- Operate the appliance only at the voltage specified on the rating label.
- Only connect the unit to a properly installed and easily accessible socket so that you can quickly disconnect the plug if necessary.
- This air circulator should not be used for commercial or industrial or leisure applications or in small enclosed spaces.
- Never use the mains lead as a carrying strap or pulling lead.
- To avoid a fire or electrocution hazard, **NEVER** put the cord near heat registers, radiator, stoves or heaters.
- **DO NOT** cover cord with carpeting, throw rugs, runners, or similar coverings.
- **DO NOT** route cord under furniture or appliances. Take care to position the cord away from traffic areas and where it will not be a tripping hazard.
- **DO NOT** use the unit near windows or where water collects. Rain and water collection may lead to a risk of fire or electric shock.
- **WARNING** - To avoid danger of suffocation please remove all packaging materials

particularly plastic and EPS and keep these away from vulnerable people, children and babies.

- **NEVER** drop or insert any object or fingers into any openings.
- Do not use the appliance in locations where paint, petrol or other flammable liquids are used or stored.
- Do not use bug sprays or other flammable cleansers/vapour sprays on or around the unit.
- Always switch off the unit and take the plug out of the socket:
 - If you are not using the unit
 - Before you clean or carry out maintenance on the unit
 - If a fault occurs
 - In the event of an electrical storm.
- Avoid electromagnetic interference. Keep the unit at least 1 metre away from electrical appliances such as televisions & radios.
- Use this appliance on a horizontal and stable surface.
- Children shall not plug in, regulate and clean the appliance or perform user maintenance.
- **DO NOT** incinerate the fan and its' battery even if severely damaged. This may cause a fire.
- **DO NOT** disassemble and replace components of the fan randomly. In the case of failure, contact the after sales service department.
- Only use the detachable power supply unit with this product.
- **DO NOT** use this appliance with an extension lead or power board.
- **DO NOT** charge the device outdoors. The adaptor is not waterproof and this will cause damage.
- **WARNING** - To avoid damage, ensure to take the device indoors during heavy rain.



Exposed to the weather outdoors



 
Near water



If the power cable wires are frayed or cut



Where small children may be left unattended

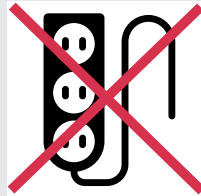

No extension leads or power boards



Where the power cable may be damaged



On a slope or uneven surface



Where there is risk of fire or close to a naked flame



Where it may be damaged by chemicals



Where there is a risk of interference by foreign objects



This product is not made for DIY repair



If there is a risk of water falling on the unit

Specification

Model no.	DCAC25DC
Power supply	100-240V~, 50/60Hz
Voltage	26.5V/1.2A
Rated power	31.8W
Speed settings	Stepless Speed
Timer	N
Air speed	5.5m/s
Oscillation	60° (+ or - 5°)
Tilt Head	300°
Noise level (MAX)	60dB(A)
Weight (net)	2.2kg
Dimensions (w x d x h)	336 x 195 x 358mm

- For greater precision, please always refer to the rating label placed on the product.

How It Works

In contrast to a traditional fan which brings only cooling benefits when directly facing you; an air circulator works for any season, keeping the air in motion and making the entire room more comfortable to be in.

This jet stream helps maintain a constant room temperature by ridding the room of cold and warm spots. It also clears stuffy atmospheres by circulating stale air with fresh air from an open window.

Air circulators are the safe, all-year-round temperature regulation solution you've been looking for.

This DC Air circulator can be used both indoors & outdoors and is rechargeable.

Note: This model is designed for both indoor and outdoor usage and is perfect for activities such as camping. Please note that you must take the unit indoors during heavy rain, as this may damage the device. This device must also only be charged indoors, as the adaptor is not waterproof.

 
Where To Position

During Summer, pointing the air circulator towards a wall halfway between the floor and the ceiling, as well as using the highest setting, will set up a high speed air circulation pattern.


This will cool down the room in an efficient manner. Pointing towards your air conditioner will help distribute the cool air faster, saving time and energy; essentially Turbo boosting your A/C.

During Winter, the use of a heater alone produces warm air that rises naturally to the ceiling.

By pointing the air circulator upwards, and utilising the lowest speed setting, the hot air will circulate with the cooler air near the floor, resulting in a more even room temperature.

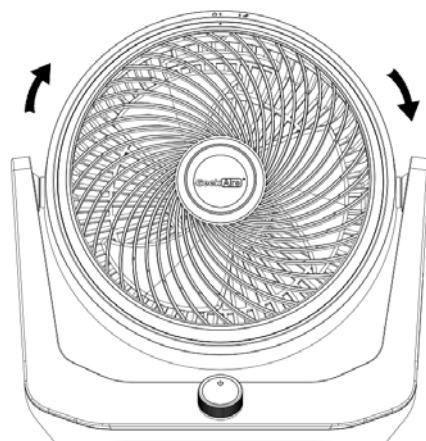

Parts

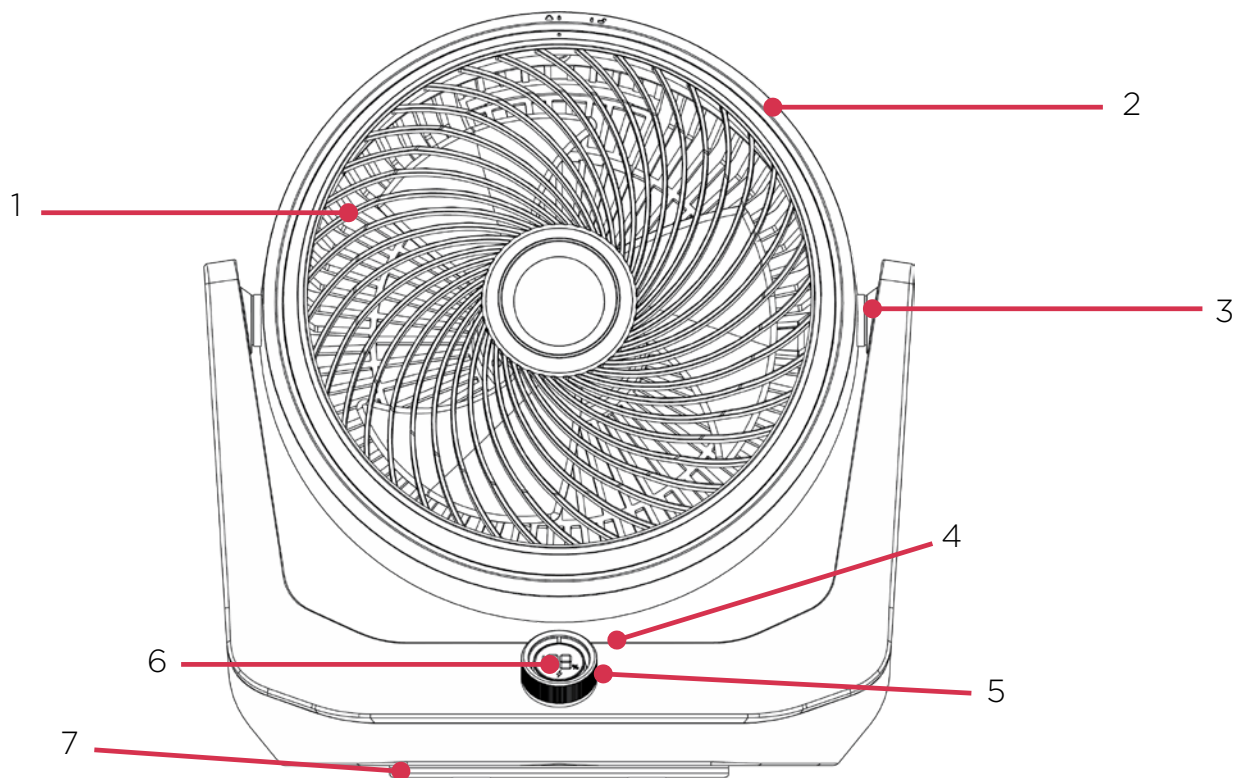 

1	Front Grille
2	Outer Shell
3	Tilt Head Handle
4	Charging Ports (Back)
5	LED Ring Display
6	Digital Display Switch
7	Oscillating Base

Note: Before usage, ensure you check if the voltage and frequency complies with local power supply.

ON/OFF

Press the switch of the digital display screen in the centre of the unit to turn the device on.

WIND SPEED

Rotate the switch to select wind speed. This device uses a stepless speed functionality. Rotating the switch to the right will gradually increase the wind speed. The light around the switch is a determination of the wind speed. When the light ring is completely full, this means the device is operating on maximum wind speed. When the battery power is less than 40%, the fan will enter a low rotation wind speed.

OSCILLATION

Press the switch for 3 seconds to enable the fans automatic swing function. The fan will oscillate up to 60° left and right. To stop this function, press the switch again for 3 seconds.

TILT HEAD

 
This unit has tilt head functionality. You can tilt the head of the fan 300° up or down to angle the fan head to your preferred position.

Recharging

To charge this device, connect the adapter into the charging plug at the back of the unit behind the water proof plug. When charging the unit with the adapter, ensure to connect the charging head of the product first, and then connect to the external power supply. The percentage shown on the digital display screen is the amount of battery power left. The screen will display 100% when completely charged, for one minute.

Note: When charging indoors, ensure to pull out the waterproof plug at the charging port. It is recommended to always charge indoors, but if charging outdoors, ensure to plug in the waterproof silicone cover at the charging port.

If the battery power of the unit is greater than 20%, it is possible to charge your phone and other USB compatible devices using the air circulator. Remove the water proof plug to see the USB plug, next to the charging plug.

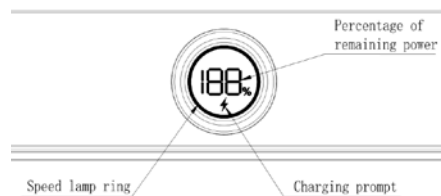

Cleaning

Over time, dust can accumulate on the grille covers, filter (if applicable) and fan blades, which can affect the fans performance. It is recommended to clean the fan at least once a month.

1. Turn the unit OFF and disconnect the appliance from the power supply.
2. Remove any dust build up with a soft brush.
3. Wipe the surface of the unit with a soft damp cloth. Mild detergent can be used for any stubborn marks.

IMPORTANT

The control panel and other parts must not come into contact with water or any other liquids.

Storage

If not using the unit for an extended period of time. After cleaning please:

- Turn the unit off, unplug and take care of the mains lead & plug.
- Cover the unit and store it upright in a location where it will not receive direct sunlight. NB- Prolonged exposure to direct sunlight will discolour the outer casing.

Maintenance

If the unit fails to operate efficiently, is broken or other problems arise, unplug and do not operate. Ask for advice by calling your local after sales service agent or the Customer Care Centre on 1300 556 816 (AU) / 0800 666 2824 (NZ).

Warranty

Please refer to the warranty card in the box for warranty information. For any troubleshooting advice, please contact the relative Customer Care Centre below.

Glen Dimplex Australia Pty Ltd

8 Lakeview Drive,
Scoresby 3179, Victoria
Australia
Ph: 1300 556 816

Glen Dimplex New Zealand Ltd

38 Harris Road, East Tamaki,
Auckland 2013
New Zealand
Ph: 0800 666 2824



Recycling: Do not dispose of electrical appliances as unsorted municipal waste. Use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the ground water, polluting the food chain and damaging health and well-being.



Customer Care: 1300 556 816
customer.care@glendimplex.com.au
www.dimplex.com.au

Supplied by Glen Dimplex Australia
8 Lakeview Drive, Scoresby, Victoria, 3179

© Glen Dimplex Australia. All rights reserved. Material contained in this publication may not be reproduced in whole or in part, without prior permission in writing of Glen Dimplex Australia.