




INSTRUCTION MANUAL

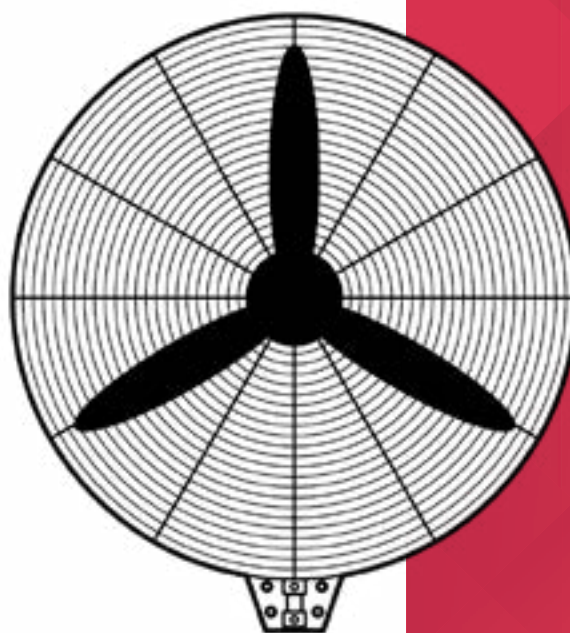

HV Wall Fan

Model: DCWF50MB & DCWF75MB

For domestic household use only.



IMPORTANT

THESE INSTRUCTIONS SHOULD BE READ CAREFULLY AND RETAINED FOR FUTURE REFERENCE.

Note also the information presented on the appliance

CAUTION: FAILURE TO FOLLOW THESE INSTRUCTIONS MAY CAUSE INJURY AND/OR DAMAGE AND MAY INVALIDATE YOUR WARRANTY

Please read the operating instructions carefully before using your fan for the first time and keep them in a safe place.


WARNING – This appliance must not be used in a bathroom.

WARNING – Do not use this appliance in the immediate surroundings of a bath, a shower or a swimming pool.

- Never immerse the appliance in water or other liquids.
- Operate this unit only on a firm, flat surface.
- Do not place on soft, unstable or non-horizontal/angled surfaces.
- Never operate the appliance if a cable or connector has been damaged, after appliance malfunction or if the appliance was dropped or is otherwise damaged.
- If the mains lead is damaged it must only be replaced by the manufacturer's service agent or a similarly qualified person in order to avoid a hazard.
- Please ask a professional service agent to repair the product. Improper repair may cause danger to users.
- Disconnect the appliance from mains power whenever it is not in use, before relocating it, and before cleaning.
- Operate the appliance only at the voltage specified on the rating label.
- Only connect the unit to a properly installed and easily accessible socket so that you can quickly disconnect the plug if necessary.
- Do not connect this product to the mains using an extension lead.
- This fan is only intended for **INDOOR RESIDENTIAL** applications. This fan should not be used for commercial or industrial or leisure applications or in small enclosed spaces.
- Never use the mains lead as a carrying strap or pulling lead.
- To avoid a fire or electrocution hazard, **NEVER** put the cord near heat registers, radiator, stoves or heaters.
- **DO NOT** cover cord with carpeting, throw rugs, runners, or similar coverings.
- **DO NOT** route cord under furniture or appliances. Take care to position the cord away from traffic areas and where it will not be a tripping

hazard.

- **DO NOT** use the unit near windows or where water collects. Rain and water collection may lead to a risk of fire or electric shock.
- Only operate this appliance with a minimum of 50cm clearance all around i.e. away from walls, furniture and overhanging objects such as curtains or a shelf.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- **WARNING:** To avoid danger of suffocation please remove all packaging materials particularly plastic and EPS and keep these away from vulnerable people, children and babies.
- **NEVER** drop or insert any object or fingers into any openings.
- Do not use the appliance in locations where paint, petrol or other flammable liquids are used or stored.
- Do not use bug sprays or other flammable cleansers/vapour sprays on or around the unit.
- Always switch off the unit and take the plug out of the socket:
 - If you are not using the unit
 - Before you clean or carry out maintenance on the unit
 - If a fault occurs
 - In the event of an electrical storm.
- Avoid electromagnetic interference. Keep the unit at least 1 metre away from electrical appliances such as televisions & radios.

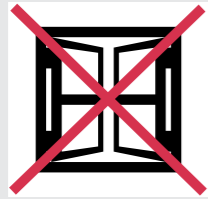

Exposed to the weather outdoors



Near water



If the power cable wires are frayed or cut



Where small children may be left unattended



If an extension lead may become overloaded



Where the power cable may be damaged



On a slope or uneven surface



Where there is risk of fire or close to a naked flame



Where it may be damaged by chemicals



Where there is a risk of interference by foreign objects



This product is not made for DIY repair



If there is a risk of water falling on the unit

Specification

Model no.	DCWF50MB	DCWF75MB
Colour	Matte Black	
Power supply	220-240V~, 50-60Hz	
Rated power	180W	285W
Speed settings	19	
Modes	-	-
Timer	1/2/4/8hr	
Tilt adjustable head	Y	
Horizontal oscillation	Y	
Noise level	73dB(A)	74dB(A)
Weight (net)	8.5kg	13kg
Dimensions (w x d x h)	580 x 380 x 730mm	815 x 380 x 915


• For greater precision, please always refer to the rating label placed on the product.

Included:

- Front & rear grilles
- Motor housing
- Fan blade
- Long bolt & washer
- Fixing bar
- Mounting bracket
- Remote control (batteries not included)
- Remote cradle (screws not included)
- 2 x fixing bar screws
- 4 x rear grille screws
- 1 x grub screw
- 1 x safety grill screw & bolt

Not included:

- 4 x M8 (35mm) masonry bolts and matching anchors.
- 4 x 8mm inner diameter washers.
- 2 x small remote cradle screws
- 1 x A23 12V battery

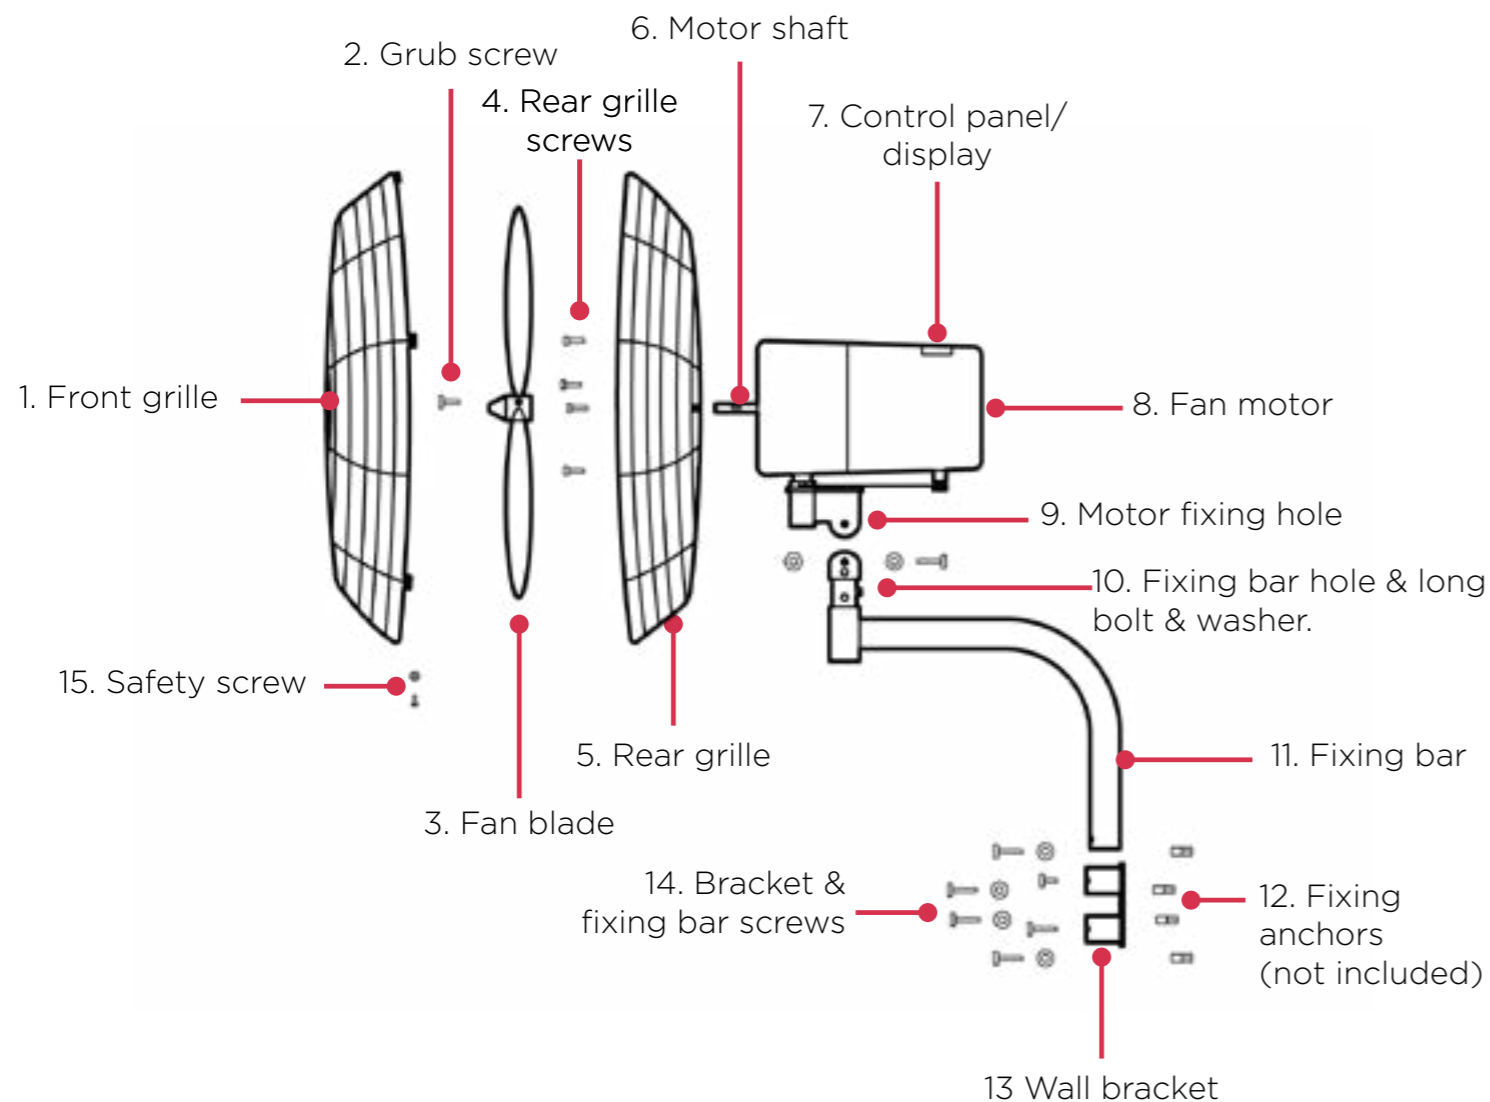

Mount to the wall

1. Determine the desired location of the wall fan (must be 1.8m from the floor) and ensure the wall is structurally sound to cope with the load of the fan.
2. Hold the wall bracket (13) in position, and mark the screw holes with a pencil. Ensure everything is marked horizontally and aligned before drilling.
3. Drill the holes where the pencil marks are to suit the 4 x fixing anchors (12).
4. Mount the wall bracket (13) on the wall with the 4 x fixing anchors (12)

Assemble the motor to the fixing bar

1. Attached the fan motor (8) to the fixing bar (11) by aligning the motor fixing hole (9) with the fixing bar hole (10) and use the long bolt and washer supplied to secure.
2. Place the bottom of the fixing bar (11) into the wall bracket (13) and use the bracket fixing pole screws (14) to tighten and secure to the bracket.

Attach the rear grille

1. Align the rear grille (5) to motor shaft (6) on the fan motor (8) and ensure the hole for the safety screw is at the bottom. The 4 screw holes on the front of the fan motor (8) should line up. Firmly tighten all four rear grille screws (4).

Attach the fan blade

1. Once the rear grille (5) is attached to the fan motor (8), turn the motor shaft (6) so the flat area is at the top. Slide the fan blade (3) all the way onto the motor shaft (6) and firmly tighten the grub screw (2) by rotating in a clockwise direction.

Attach the front grille

1. Once the fan blade is fixed, align the top locking clip on the front grille (1) so it fixes to the that of the rear grille (5). Lock the side and bottom clips in place.
2. Secure the front & rear grille, by inserting and fixing the safety screw (15) and nut.

TIP: the logo should be horizontal.


Remote

Insert 1 x A23 12V batteries (not included) into the remote.

Control/Display Panel



Remote

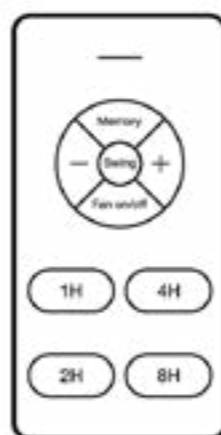

Operation

The wall fan can be operated by the control panel, or the remote control.

1. Ensure the wall fan is plugged in and the power supplier is on.
2. Turn the fan **ON** by pressing the '**ON-OFF**' button.
3. To adjust the speed, press the '**+**' or '**-**' button. The selected speed setting will show on the display panel.
4. If oscillation is required, press the **SWING** button, to start & stop oscillation.
5. The **MEMORY** button memorise the previous speed setting when **OFF**.
6. There are 4 timer settings, however they can only be operated via the remote control. Press the corresponding timer button '**1H**', '**2H**', '**4H**' or '**8H**' to start the desired time setting. The timer chosen, will display on the display panel. **Note:** Only the 4 x settings can be selected, the time doesnt accumulate. The timer can't be cancelled once activated, unless turned **OFF** manually.
7. Turn the fan **OFF** bypressing the '**ON-OFF**' button.

Cleaning

Over time, dust can accumulate on the front & rear grille cover and fan blades, which can affect the fans performance. It is recommended to clean the fan at least once a month.

1. Turn the unit OFF and disconnect the appliance from the power supply.
2. Remove any dust build up with a soft brush.
3. Wipe the surface of the unit with a soft damp cloth. Mild detergent can be used for any stubborn marks.

Do not use abrasive sponges, scouring pads, or a stiff brush to clean the fan.

IMPORTANT

The control panel and other parts must not come into contact with water or any other liquids.

Storage

If not using the unit for an extended period of time. After cleaning please:

- Turn the unit off, unplug and take care of the mains lead & plug.
- NB- Prolonged exposure to direct sunlight will discolour the enclosure.

Maintenance

If the unit fails to operate efficiently, is broken or other problems arise, unplug and do not operate. Ask for advice by calling your local after sales service agent or the Customer Care Centre on 1300 556 816 (AU) / 0800 666 2824 (NZ).

Warranty


Please refer to the warranty card in the box for warranty information. For any troubleshooting advice, please contact the relative Customer Care Centre below.

Glen Dimplex Australia Pty Ltd

8 Lakeview Drive,
Scoresby 3179, Victoria
Australia
Ph: 1300 556 816

Glen Dimplex New Zealand Ltd

38 Harris Road, East Tamaki,
Auckland 2013
New Zealand
Ph: 0800 666 2824

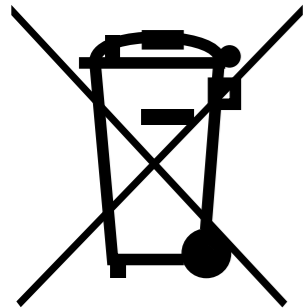

Recycling: Do not dispose of electrical appliances as unsorted municipal waste. Use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the ground water, polluting the food chain and damaging health and well-being.



Customer Care: 1300 556 816
customer.care@glendimplex.com.au
www.dimplex.com.au

Supplied by Glen Dimplex Australia
8 Lakeview Drive, Scoresby, Victoria, 3179

© Glen Dimplex Australia. All rights reserved. Material contained in this publication may not be reproduced in whole or in part, without prior permission in writing of Glen Dimplex Australia.

DCWF50MB & DCWF75MB REV1